

BACnet is an option that is available on all IBC VFC and SL boiler models that are equipped with the IBC Touch Screen Controller. This is licensed feature that requires an activation code.

To obtain the license activation code:

1. A BACnet “Site License” is required for activating the BACnet option. Please contact your distribution to obtain a site license if you do not yet have one.
2. On each controller that is to be activated, go to the “Network Information” screen in the “Diagnostics” menu.
3. Write down the “MAC Address” for the controller(s) to be activated.
4. E-Mail the list of MAC address, along with the site license information or a copy of the invoice and your contact information to IBC Technologies. IBC will verify the information provided, and then provide you with a license activation file or a USB Flash Drive.
5. If the file was E-Mailed to you, copy the activation file into the “root” directory of a USB Flash drive.
6. On each controller at the site:
 - Insert the USB Flash drive into the controller
 - Go to “Installer Settings” – “System Settings” – “Licensing” and press “Activate Key”
 - The controller will need to reboot to activate the license.

Once the BACnet license has been activated on the controller, you must also enter a unique Boiler ID and BACnet ID before any BACnet objects will be available.